

Cuprinol

POWER SPRAYER™

GENERAL SAFETY RULES

WARNING!

READ AND UNDERSTAND ALL WARNINGS AND OPERATING INSTRUCTIONS BEFORE USING THE EQUIPMENT.

Failure to follow all instructions listed below, may result in electric shock, fire, and/or serious personal injury or property damage.

PLEASE KEEP THESE INSTRUCTIONS.

1 WORK AREA

- a. Keep work area clean and well lit. Cluttered and dark areas invite accidents.
- b. Do not operate the appliances in gaseous or explosive atmospheres. Motors in these appliances normally spark and sparks might ignite fumes.
- c. Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.
- d. Do not use the appliance in rain or very wet weather. Water entering the sprayer will damage the tool.

2 ELECTRICAL SAFETY

- a. Power tool charger plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce the risk of an electric shock.
- b. Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- c. Do not expose tools to rain. Do not use tools in damp or wet conditions. Keep work area well lit. Do not use tools where there is a risk to cause fire or explosion.
- d. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of an electric shock.

3 PERSONAL SAFETY

- a. Beware of any hazards presented by the material being sprayed and consult the marking on the container or the information supplied by the manufacturer of the material to be sprayed, including requirements for the use of personal protective equipment. Use only with **Cuprinol** products as recommended in the User Guide
- b. Do not spray yourself, any person or animal. Keep hands and other body parts away from the discharge.
- c. Hearing protection is recommended for extended use.
- d. Use eye protection to keep droplets out of eyes.
- e. Do not wear loose clothing or jewellery, they can be caught in moving parts. Rubber gloves and non-skid footwear are recommended when working outdoors. Wear protecting hair covering to contain long hair.
- f. Keep proper footing and balance at all times.
- g. Do not carry the tool with a finger on the switch.
- h. Watch what you are doing. Use common sense. Do not operate the tool when you are tired.

4 SPRAYER USER AND GUIDE

- a. Read the label on its original container thoroughly and follow its directions before using any fence treatment or other spray materials in this sprayer. Some spray materials are dangerous and should not be used in this sprayer as they can damage the sprayer and cause serious bodily injury or property damage. Use only with **Cuprinol** products as recommended in the User Guide.
- b. Before each use, check this product for damaged parts and leakage.
- c. Do not use caustic (alkali) self heating or corrosive (acid) liquids in this sprayer as these can corrode metal parts or weaken hose and seals.
- d. Do not use hot or boiling liquids in sprayer as this may weaken tank and hose.
- e. Do not leave residue or spray material in the tank after using sprayer.
- f. Only use attachments recommended or sold by the manufacturer.
- g. Before further use of the tool, any part that is damaged should be carefully checked to determine that it will operate properly

and perform its intended function. Check for breakage of parts, mounting and any other conditions that may affect its operation. Any part that is damaged should be properly repaired or replaced by an authorised service centre unless otherwise indicated in this instruction manual. Have any defective switches replaced by an authorised service facility. Do not use the tool if the switch does not turn it on and off.

- h. The use of any accessory or attachment, other than those recommended in this instruction manual, may present a risk of personal injury. Ensure that the outside surface of battery pack or tool is clean and dry before plugging into charger.
- i. Do not use sprayers for spraying flammable materials.
- j. Do not clean sprayers with flammable solvents.
- k. Do not spray any material where the hazard is not known.

5 BATTERY TOOL USE AND CARE

- a. Ensure the switch is in the off position before inserting battery pack. Inserting the battery pack into power tools that are switched on invites accidents.
- b. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- c. Use the appliance only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- d. When battery pack is not in use, keep it away from other metal objects like paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- e. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- f. When not in use, tools and batteries should be stored separately in a dry, high or locked up place, out of reach of children.

6 ADDITIONAL SAFETY RULES FOR THE CHARGER

- a. Before using the charger, read all the instructions and cautionary markings on the charger.
- b. Only charge the tool indoors as the charger is designed for indoor use only.

WARNING! Do not allow any liquid to come into contact with the charger. There is a danger of electric shock.
- c. Foreign materials of a conductive nature such as, but not limited to, steel wool, aluminum foil, or any buildup of metallic particles should be kept away from charger cavities. Always unplug the charger from the power supply when there is no battery pack in the cavity. Unplug charger before attempting to clean.
- d. The charger is not intended for any use other than charging the battery pack as supplied with the sprayer. Any other use may result in the risk of fire, electric shock or electrocution.
- e. The charger and the battery pack supplied with the sprayer are specifically designed to work together. Do not attempt to charge the battery pack with any other charger than the one supplied.
- f. Do not place any object on top of the charger as it could cause overheating. Do not place the charger near any heat source.
- g. Do not pull on the lead of the charger to disconnect it from the power source.
- h. Make sure that the charger cable is positioned where it will not be stepped on, tripped over or otherwise subjected to damage or stress.
- i. Do not use the charger if it has been subjected to a heavy knock, dropped or otherwise damaged in any way.

- j. Do not probe the charger.
- k. Do not expose the charger to water.
- l. Do not disassemble the charger. Incorrect re-assembly may result in the risk of fire, electric shock or electrocution.
- m. Do not store or use the tool in locations where the temperature may reach or exceed 40°C (104°F).
- n. The charger is designed for use from a standard household electrical supply (230–240 volts).

7 ADDITIONAL SAFETY RULES FOR THE BATTERY PACK

- a. To ensure the longest battery life and best battery performance, always charge the battery when the air temperature is between 18–24°C (65–75°F). Do not charge the battery when the temperature is below 4°C or above 40°C.
- b. Do not incinerate the tool even if it is seriously damaged or can no longer hold a charge. The battery can explode in a fire.
- c. Never attempt to access the battery for any reason. If the plastic housing of the tool battery breaks open or cracks, immediately discontinue its use and do not recharge it. The battery may be short circuited causing damage to the battery, burns or a fire.
- d. Only charge a battery using the charger supplied with the tool.
- e. Do not expose the battery pack to water.
- f. Do not store in locations where the temperature may exceed 40°C.
- g. If the battery pack does not charge properly:
 - Check current at receptacle by plugging in a lamp or other appliance
 - Check to see if receptacle is connected to a light switch which turns power off when you turn out the lights.
 - Move charger and battery pack to a location where the surrounding air temperature is approximately 18°C-24°C
- e. If charging problems persist, take the tool, battery pack and charger to your local service center.

The battery pack should be recharged when it fails to produce sufficient power on jobs which were easily done previously. DO NOT CONTINUE to use under these conditions. Follow the charging procedure.

PLEASE KEEP THESE INSTRUCTIONS

SPECIFICATIONS

Power Sprayer

Model - GS10012

Voltage - 12V DC

No Load Speed - 6500/min

Spray volume of single full charge - More than 10 litres

Battery - Ni-Cd, 1500mAh

Charger - 230-240VAC 50Hz, 1 hour charger.

NOISE AND VIBRATION DATA

LpA (sound pressure) 76.5 dB(A)

LWA (acoustic power) 87.5 dB(A)

hand/arm weighted vibration 0,26 m/s²

KpA (sound pressure uncertainty) 3 dB(A)

KWA (acoustic power uncertainty) 3 dB(A)